

BATTENTI DI FINE CORSA

LIMIT STOPS
 BATTANT DE FIN DE COURSE
 ENDTÜRFLÜGEL

Battenti fine corsa a saldare

Limit stops to be welded
 Battant de fin de course à souder
 Endtürflügel zum Schweißen



Cod. 172




Cod. 173



Cod. 374



Cod. 372
 Ammortizzato a molla

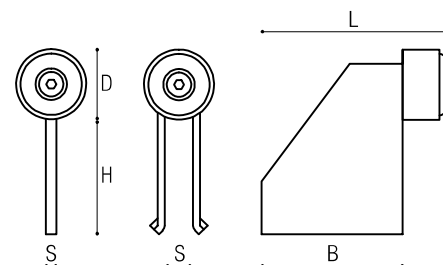

Cod.	S	B	L	D	H	
172	6	80	96	40	87	8
173	18	110	148	40	72	6
374	21	75	101	48	70	6
372	8	58	120-150	39	52	4

Battenti fine corsa a fissare

Limit stops to be fixed
 Battant de fin de course à visser au sol
 Endtürflügel zum Fixieren



Cod. 272





Cod. 273



Cod. 474



Cod. 472
 Ammortizzato a molla

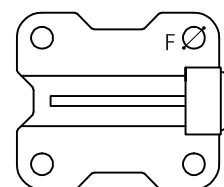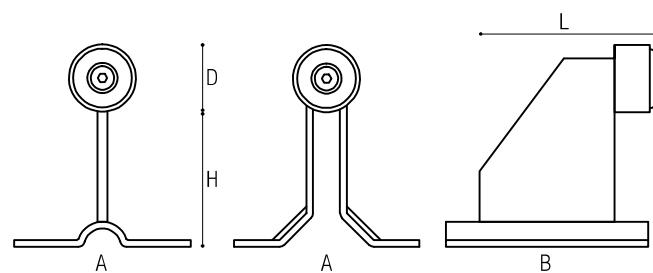

Cod.	A	B	L	D	H	F	
272	107	120	96	40	108	13	8
273	112	110	148	40	85	11	6
474	112	95	107	48	67	11	6
472	107	120	120-150	39	72	13	4